







© 087 238 2324



Good Energies Alliance

Y O GEAlreland

HOUSEHOLD

ENERGY SAVING TIPS

Electric
Appliances





For more energy-saving
tips visit our website
www.goodenergiesalliance.ie





FRIDGE


- Don't' set fridge thermostat below
 4°C and freezer below -18°C
- Defrost regularly
- Don't put warm food in the fridge and reduce opening time

DISHWASHER

- Operate dishwasher at full load
- Select eco mode to also save water
- Clean the filter once per month

WASHING MACHINE

- Buy only A class
- Choose low-temperature washing programmes
- select eco-mode

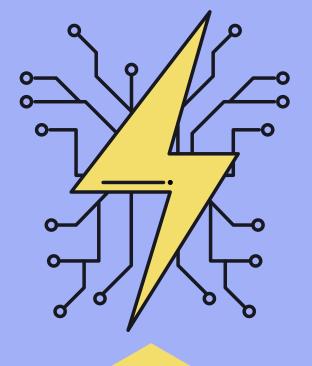

Save up to 25% on your electricity bill

to smart home controls to reduce overall hourly consumption



